
## **BASIC USER FEATURES**

How to print two sided or change paper orientation from your computer

## HOW TO PRINT TWO SIDED OR CHANGE ORIENTATION PAPER FROM YOUR COMPUTER

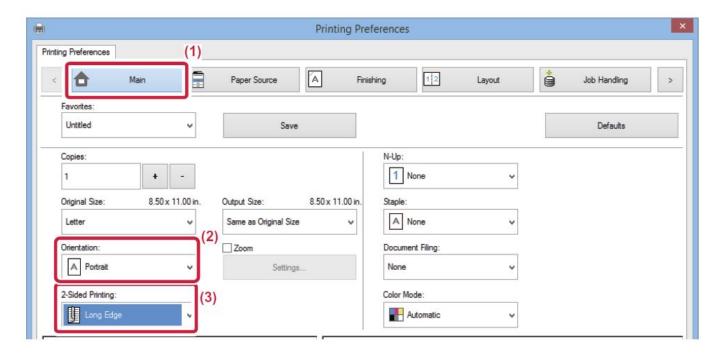

- 1. Open your control panel printer section. Right click on your SHARP printer preferences.
- 2. In the main section, you can change your paper configuration before start print.
- 3. Go to 2-Sided settings and choose your configuration. NONE is for 1-Sided print, Long Edge is for booklet 2-Sided print and Short Edge is for tablet printing.
- 4. For paper orientation settings, you can choose either for Landscape or Portrait mode.

Unique solution ID: #1009

Author: Admin IT

Last update: 2024-04-18 08:25