


BASIC USER FEATURES

How to use N-UP function before printing from your computer HOW TO USE N-UP FUNCTION BEFORE PRINTING

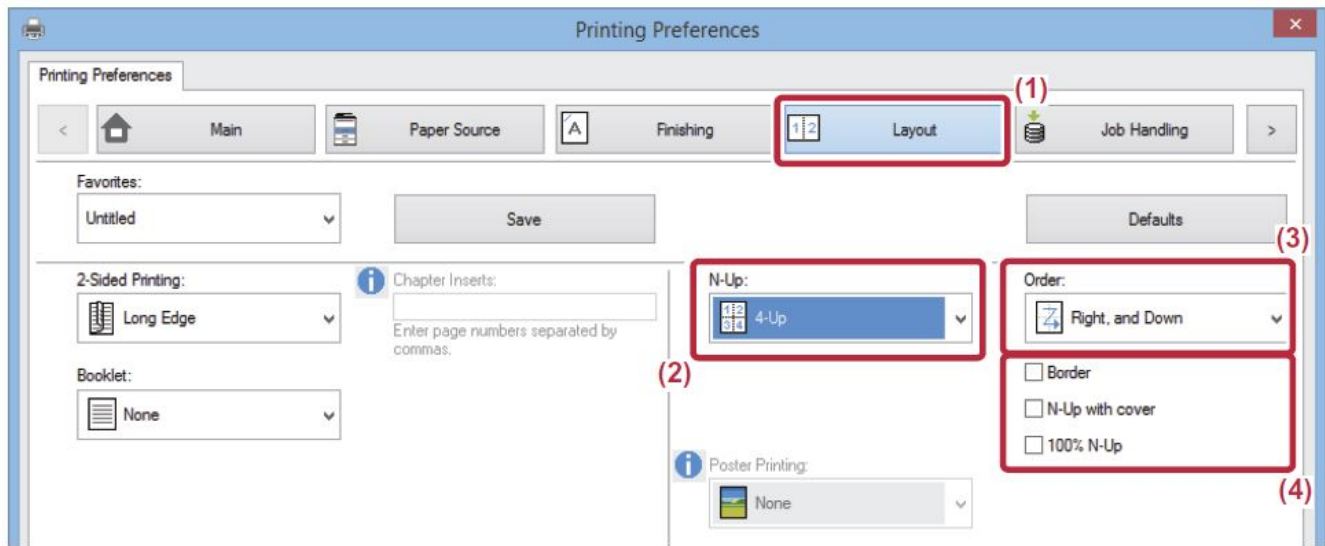

1. Go to your control panel printer section. Right click on your SHARP printer preferences.
2. In the layout section, go to N-UP section and setting your needed.
3. N-Up function is use to print multiple page in one page. Can be set up to 16 pages before print.

Unique solution ID: #1011

Author: Admin IT

Last update: 2024-04-18 10:14