BASIC USER FEATURES

How to add job handling authentication ID in computer HOW TO ADD YOUR USER AUTHENTICATION ID IN COMPUTER

				Printing Pre	ferences		
nting Preferences					30 MM	(1)	(Transmission)
< 👌	Main		Paper Source	A Brit	shing 112	Layout	Job Handing
Favortea:							
Untitled		*	Save	i			Defaulta
Print Release	6		-	(0)	Authentication:		Login Name:
Document Filing:				(2)	Login Name/Pa	eeword 🗸	user1
None		~		a Starter		19	Paseword.
					User Name		Job Name
					Auto Job Control Ne	eview.	
							(3
Print	and Send						(3
Print : Notify Job En	and Send						(3
Print : Notify Job En	and Send						(3
Print .	and Send						(3 5
Print : Notify Job En	and Send d						(3
Print Job En	and Send d		-∰ ŵ ■				(3 5
Print Job En	and Send d						(3

- 1. Open your computer control panel in printer section.
- 2. Right click on your SHARP printer driver preferences.
- 3. Click on Job Handling menu.
- 4. In authentication menu please choose authentication options user number or other type login ID.
- 5. Insert your user number or registered login details provided by your administration or IT.
- 6. Click on OK button.

Unique solution ID: #1008 Author: Admin IT Last update: 2024-04-18 04:34