


# BASIC USER FEATURES

## How to add job handling authentication ID in computer HOW TO ADD YOUR USER AUTHENTICATION ID IN COMPUTER

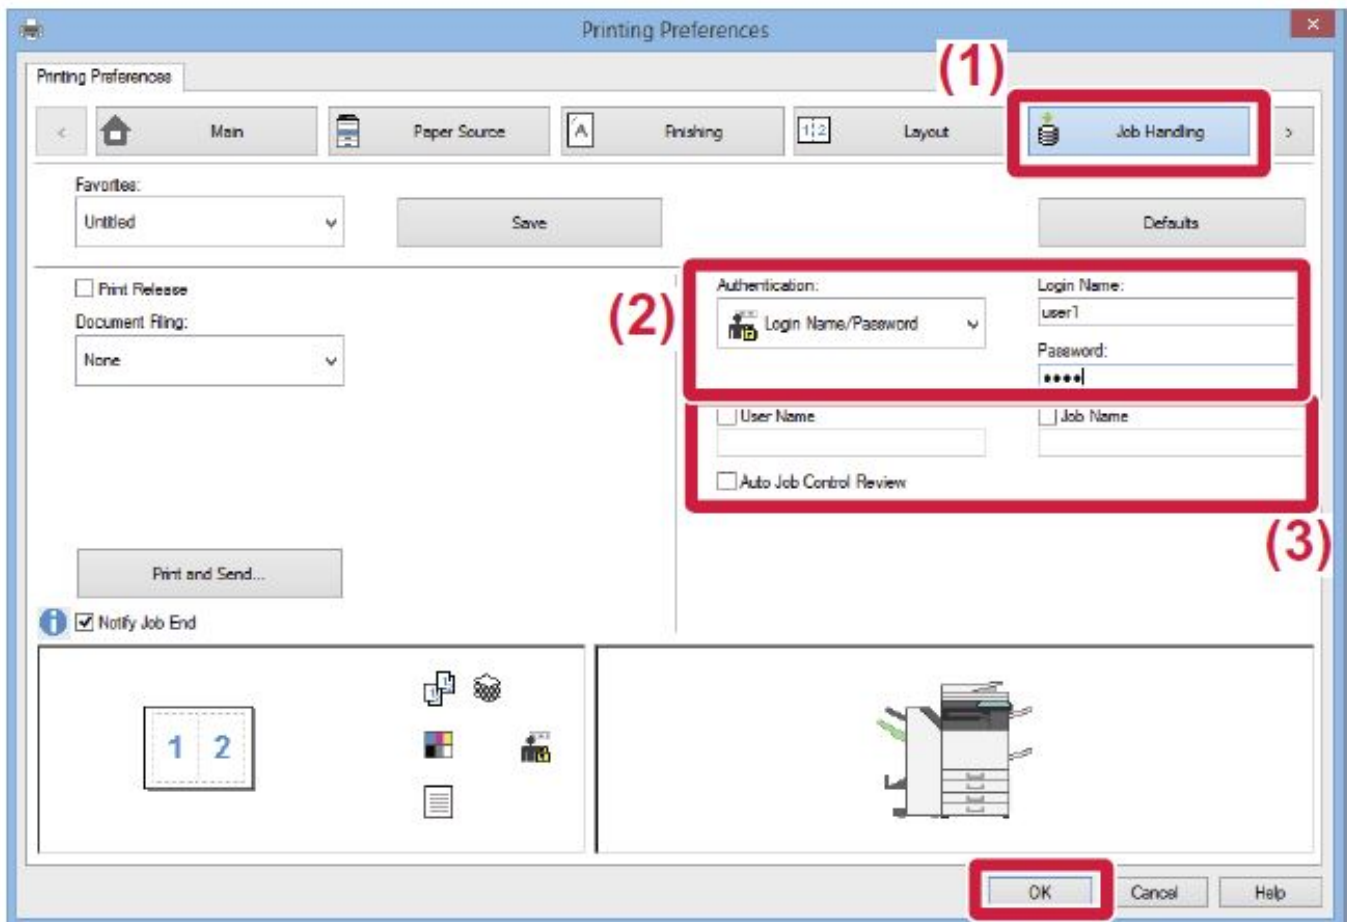

1. Open your computer control panel in printer section.
2. Right click on your SHARP printer driver preferences.
3. Click on Job Handling menu.
4. In authentication menu please choose authentication options user number or other type login ID.
5. Insert your user number or registered login details provided by your administration or IT.
6. Click on OK button.

Unique solution ID: #1008

Author: Admin IT

Last update: 2024-04-18 04:34